


RAM Power Snare WILF WASHER

RAM Power Snare Set



Species	Ram Model	Loop Size	Bottom of Loop to Ground	Recommended Cable
Coyote Fox Lynx Bobcat Wolf Wild Boar Otter Mink	Ram#1 Ram#2 Ram#2 Ram#2 Ram Wolf Master Ram Wolf Master Ram#2 Mini Ram, Ram#2	12-inches 8-inches 8-inches 8-inches 16 to 18-inches 16-inches 4½-inches Size to fit hole	12 to 14-inches 8-inches 8-inches 8-inches 16 to 18-inches 14-inches 2-inches 1/2-inch	3/64" 1/16" - 3/64" 1/16" - 3/64" 1/16" - 3/64" 3/32" - 1/16" 3/32" . 1/16" 3/64"

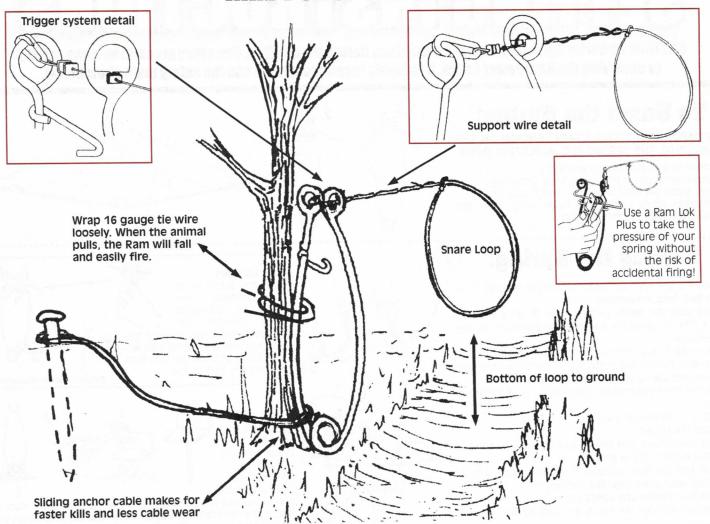

The Snare Shop
330 S. Main Street • PO Box 70 • Lidderdale, IA 51452

330 S. Main Street • PO Box 70 • Lidderdale, IA 51452 Phone: 712-822-5780 • 24-Hour Fax: 712-822-5781 www.snareshop.com • Email: sshop@snareshop.com






RAM Power Snare

CAUTION: Powerful Springs! Read all instructions before proceeding. Use every precaution when setting or unsetting the Ram Power Snare. It is highly recommended to use the safety tools show below.

To Unset the Spring:

IT IS IMPORTANT TO MAINTAIN TENSION ON THE ARMS UNTIL THE SPRING IS COMPLETELY OPEN.

- · Remove Snare Cable before unsetting.
- Maintain pressure on the spring while unsetting.
- · Firmly grasp eye ends of spring one in each hand
- Disengage safety catch while maintaining a firm grip and slowly release spring tension.

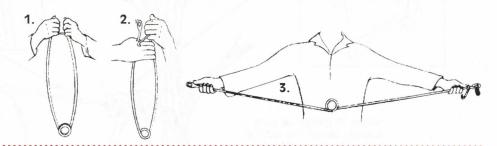

Setting the Spring:

- 1) Place the arm with the safety clip on the ground. Using the Ram Foot will increase safety.
- 2) Make sure the safety catch is free. If using the Ram foot (Fig. 1), place the safety catch between the two steel pegs.
- 3) Place your foot on the bottom arm.
- 4) With your foot on the bottom arm, force the other arm down until the safety clip can be engaged.
- 5) Pass the snare eye through the trigger eye of the Power Snare.
- 6) Hook it on to the lap link.
- 7) Rotate the lap link.

Ram Foot


upright.

- 8) Place the cable in the trigger slot with the metal stop on the outside of the trigger.
- 9) Install Ram Lok Plus as shown in the illustration. (Fig. 2)
- 10) Adjust your snare loop size and height.
- 11) Carefully remove the safety clip.
- 12) Remove the Ram Lok Plus & it's ready to fire.

FIG. 1 This will stabilize the spring and hold your safety catch 1. Place spring eye in notch (A). 2. Bring safety catch up and place between steel pegs 3. Bring other arm down and











Ram Loc Plus

Take the pressure of any conibear from #110 to strongest #330 without risk of accidental firing! Use for any size power snare. Works with ALL Power Snares from the Mini Ram



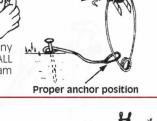

Ram Spring Support

Makes setting any Ram easy on any terrain. Drive the sup-



port stand into the surface where you are setting the Ram, then attach the coil from the Power Snare. This support allows you to set the Ram in any position. You will still need to anchor your Ram when using this product.

Treating the Spring

Using a trap dye such as Dakota Line Dip works great. If using a logwood dye, do not boil the spring in the set position. Remember that boiling will shorten the life of the spring.

Treating Snares

For a dull finish, add coil smares in a pan and cover with water. Add 2 tabelspoons of baking soda and simmer for 20 minutes. Turn heat off and leave snares in the water solution overnight. Rinse snares and hang to dry.



engage safety catch.



he Snare Shop

330 S. Main Street • PO Box 70 • Lidderdale, IA 51452 Phone: 712-822-5780 • 24-Hour Fax: 712-822-5781 www.snareshop.com • Email: sshop@snareshop.com

